

FOCALFLEX™ INSTALLATION

**Please Read
And Follow All
Installation
Instructions
Carefully**

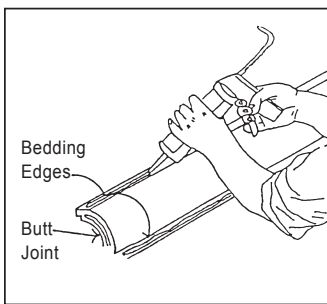


Figure 1

General

- Unroll moulding, lay flat, and let material reach room temperature of between 55-90°

1. Cutting

- Mark projection on the ceiling and depth on the wall.
- Mouldings can be cut, shaped or sanded using common woodworking tools.
- Cut compound miters for all corners.
- Cut butt joints for all straight runs.

2. Mounting

- Apply DegaBond 948 Adhesive #33333 to top and bottom bedding surfaces, corners, and butt joints (*figure 1*). Screw or nail moulding to the wall and ceiling, spacing fasteners 6" apart and 3/8" from edge.
- For large profiles, cut long strips of plywood and fasten to wall just below the depth marks. Rest moulding on plywood edge, fasten with screws or nails. Remove plywood.
- Wet adhesive can be removed with mineral spirits.

3. Finishing

- Fill screw or nail holes with vinyl spackle.
- Cover joints with vinyl spackle and lightly sand.
- Clean moulding and apply primer.
- Focal Flex may be stained with a non-penetrating gel stain.
- Use a high-quality latex or oil-based paint.
- Do **NOT** use lacquer paints.

Important Information

- Use only DegaBond 948 Adhesive.
- Call your local dealer with any questions.